– – – – – – = 3/16-in. deep groove for box bottom to fit into.

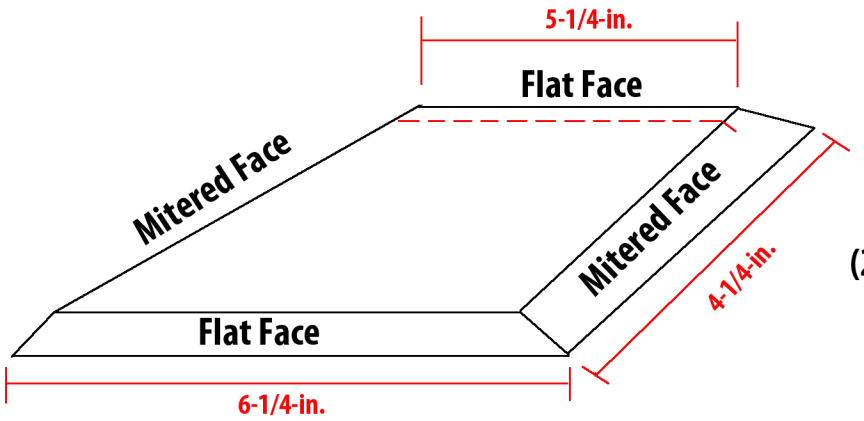

(2) Long Sides

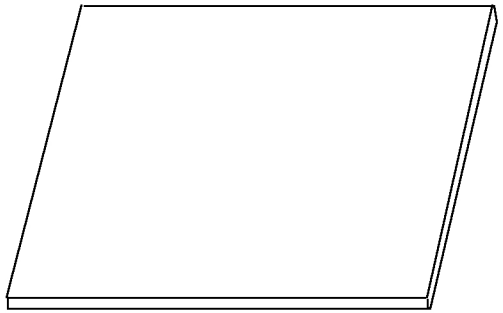

Plywood Bottom: 5-1/8-in. x 5-5/8-in.

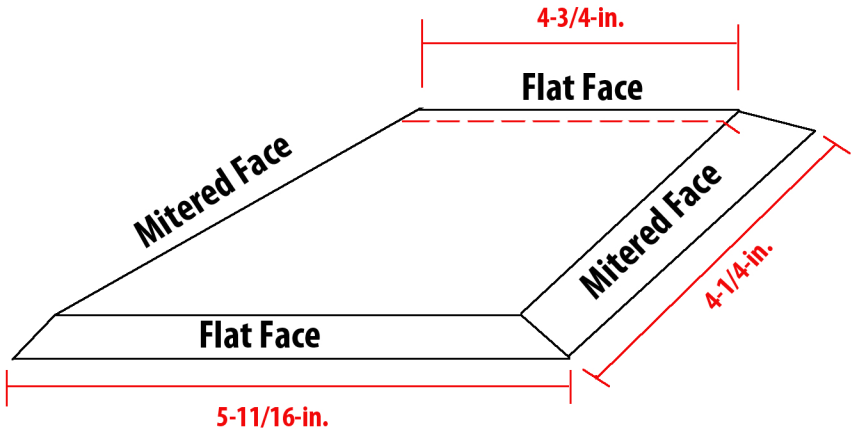

(2) Short Sides

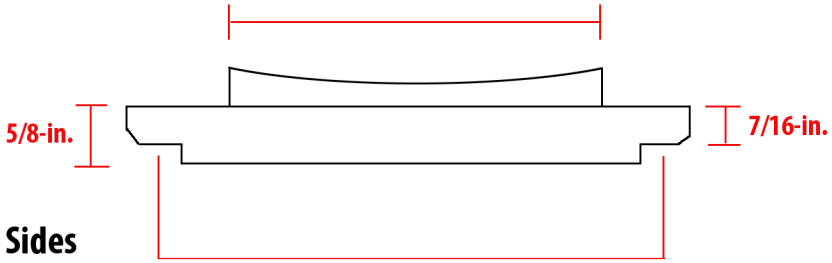

Rabbeted out for recess to fit inside box.

Box lid measures approximately 6-5/8-in. x 6-1/16-in.

start woodworking